

WX4 SERIES

2" & 3" Surface Mount Corner Guards

INSTALLATION GUIDE NO. 01
REVISED 12/11/2013

STORAGE & HANDLING

The Corner guards are shipped unassembled. Upon receipt, the vinyl covers should be stored in the horizontal position at room temperature (65 - 75° F). This is a finished product, store in a protected clean, dry area away from direct sunlight.
DO NOT WALK ON THIS PRODUCT OR STORE ANYTHING ON TOP OF IT.

Parts List

Aluminum Retainer
Vinyl Cover
End Caps
Mounting
Hardware

NOTE: Stock Length material does not always have squared ends and may require squaring in the field. If space is available use a minimum 12' long cutting bench to allow the installer to cut the material without having to turn it around.

INSTALLATION IMPORTANT!

The factory recommends using back up channels at stud wall conditions.

NOTE: Check to ensure the anchors supplied by the factory will work with the type of wall substrate on the project.

STEP 1. Place bottom end cap on the aluminum retainer. Then fit the retainer and end cap to the corner, ensure that the retainer is properly aligned with the corner.

STEP 2. Using the factory provided self drilling, self tapping screws, attach the retainer to wall. Start at the bottom of the retainer and place in the screws accordingly in the factory pre-drilled screw slots, making sure that the screws go through the metal backing stud.

STEP 3. Place the vinyl cover to the retainer, insert top end cap in order to mark the proper height of the end cap. Attach the top end cap to the retainer and the wall using factory provided screws. Please note that both the retainer and end cap have elongated screw holes that will allow for adjustment of the end cap to ensure a proper fit with the vinyl cover.

STEP 4. Place the vinyl cover over one side of the retainer, then using the palm of your hand snap the retainer into position over the other side of the retainer.

CLEANING INSTRUCTIONS

1. For best results, the use of liquid cleaners such as "409", "Fantastic", "Mr. Clean", etc. are recommended. The use of powder cleansers is not recommended, use of such cleaners can leave residue which is difficult to remove.
2. Do not use chlorinated or aromatic hydrocarbons, esters or ketones to clean Wallprotex vinyl products. Avoid the use of heavy degreasers, compounds containing surfactants, and abrasive compounds or cleaning devices.

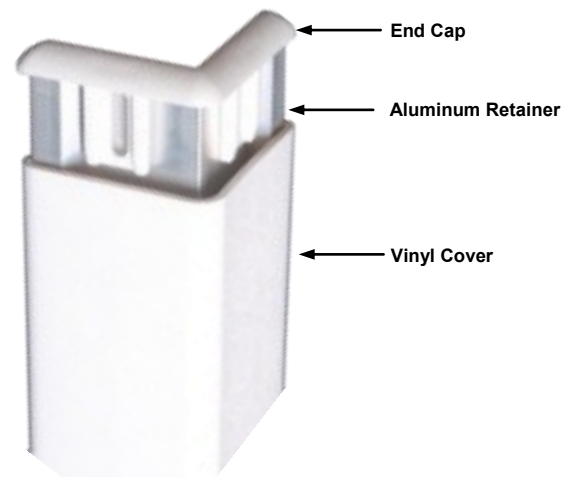


Figure 1